 


4.2 Manual Reset

If a motor or other electronic has been disconnected from the column, during or after the assembly, a reset (homing) cycle **MUST** be performed. A reset cycle should be made with an evenly distributed weight of approx. 45 kg (100 lbs) applied on the desk.

Perform a reset by:

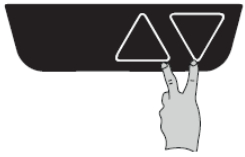

Simultaneously pressing the up and down buttons for minimum of 8 seconds.



Press and hold the down button and the desk will slowly move the lowest point possible.



The desk/stand is ready for normal use.

 
 
4.1.3 Simple memory

This handset has an editable memory for high and low (stand and sit) position. It could also be used to avoid collision with i.e. a cabinet or pedestal. When a memory position is set the desk will stop when the memory position is reached. To drive the desk outside the memory position press the up or down button for a minimum of 3 seconds.

How to set memory/end positions:

1. Drive your desk to the level you want to store.
2. Press both buttons 3 times (0,5-1 second between each pressing).
3. Then press "up" or "down" to set the position (0,5-1 second).
4. Do the same procedure for your second store.

To clear memory positions perform a reset.

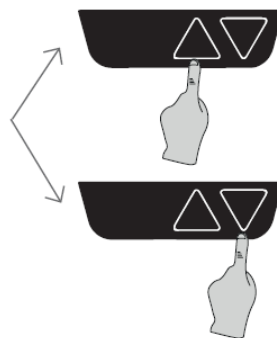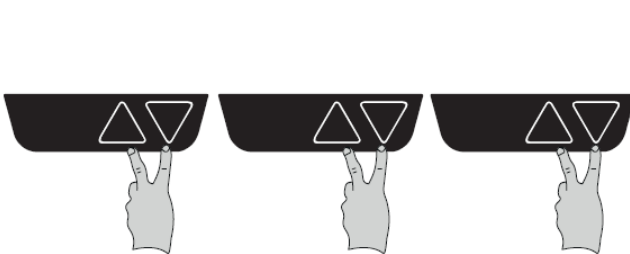

Set "Upper limit"

Set "Lower limit"